

Position RaySafe ThinX on a flat surface. Position the collimator of the X-ray machine close to the sensor area.



Expose.



Read the values on the display.

If the detected waveform is pulsed, the number of pulses will automatically be displayed.

BATTERY REPLACEMENT

Replace the battery if the yellow LED is blinking, or if the start-up screen shows after X-ray exposure.





- Remove the battery cover.
- 2. Replace the battery (CR2450).
- 3. Put the cover back. The instrument is ready to use.

CLEANING

Use a damp cloth for cleaning.

INSTRUMENT VERSIONS

This manual is valid for 1302023-A.





RaySafe ThinX Intra







SPECIFICATIONS

GENERAL

EMC tested according to EN 61000-6-1:2007 and EN 61000-6-3:2007.

Dimension:

108x45x13 mm (4.3x1.8x0.5 in)

70 a (2.5 oz)

Weight: Display:

128x64 pixels LCD Power on: auto, radiation triggered

Power off: Battery:

150 s after exposure 3V. CR2450

Trig level:

0.1m Gy/s (0.7 R/min)

DOSE

Range:

20 μGv – 999 mGv (2.3 mR - 114 R)

at > 70 kV

Minimum dose at 50 kV:

100 μGy (11.4 mR)

1 μGy (0.1 mR) Resolution: 5 % Uncertainty:

DOSE RATE

Range:

 $0.1 \, \text{mGy/s} - 100 \, \text{mGy/s}$ (0.7 R/min – 685 R/min)

at > 70 kV

Minimum dose rate at 50 kV:

0.5 mGy/s (3.4 R/min)

Resolution: 0.01 mGy/s (0.1 R/min) 5 % Uncertainty:

KVP

45 – 100 kVp Range: Resolution: 0.5 kVp Uncertainty: 3 %

HVL

Range: 1.0 - 10.0 mm Al Resolution: 0.1 mmAl

10% or 0.2 mm Al Uncertainty:

EXPOSURE TIME

10 ms - 10 s Range: Resolution: 1 ms

0.5 % Uncertainty: 0.5 kHz Bandwidth:

PULSES

Number of pulses: 3-999 (Max 375 ms dead

time between pulses.)

Uncertainty: 1 pulse

ACTIVE COMPENSATION

1.5 - 10 mm Al total filtration for 45 - 100 kV.

PARAMETERS



DEFINITIONS

Exposure time is measured from start trig until the signal drops below 25% of max (HF/DC), or from the first pulse that has a peak above 25% of max until the last time the signal drops below 25% of max (AC).

All recorded samples are used to calculate dose and HVL

Dose rate is (dose)/(exposure time).

kVp is calculated from 5 ms after trig until the signal drops below 75% of peak (HF/DC), or from pulses with a peak signal level above 75% of maximum (AC).

LED INDICATION

RaySafe ThinX Intra has three LED:s. Normal state is an idle blink every fourth second.

• Green	Idle blink: The instrument is ready to use.	
• Green	Intense blink: An exposure has been recorded	
 Yellow 	Replace the battery. 100 exposures left.	
• Red	Idle blink: Replace the battery. No further measurements are allowed.	
	Intense blink: An error has occurred. See details on display.	

DISPLAY MESSAGES

Exposure error message	Action
Low signal	Increase dose, dose rate or kV.
High signal	Decrease dose, dose rate or kV.
Radiation during calculation	Wait longer between exposures or make the time between pulses shorter than 375 ms.
Total filtration > specification	Decrease the amount of filtration.
Time < 10 ms	Increase exposure time.
Time > 10 s	Decrease exposure time.
Dose < 20 μGy (2.3 mR)	Increase dose.
Dose > 999 mGy (114 R)	Decrease dose.
Dose rate < 0.1 mGy/s (0.7 R/min)	Increase the dose rate.
Dose rate > 100 mGy/s (685 R/min)	Decrease the dose rate.
Number of pulses < 3 for kVp	Increase the number of pulses to make an AC kVp calculation.
kVp < 45 kVp	Increase kVp.
kVp > 100 kVp	Decrease kVp.
Number of pulses > 999	Decrease the number of pulses.

Information message	Action
Battery low. 100 exposures left.	Replace the battery.
Battery low. Replace battery.	Replace the battery immediately. No further measurements allowed.
Instrument error	Please write down the error code and contact support (technical support@raysafe.com).